





HOW TO REPLACE A NORTHSTAR TUBE VALVE STEP BY STEP INSTRUCTIONS

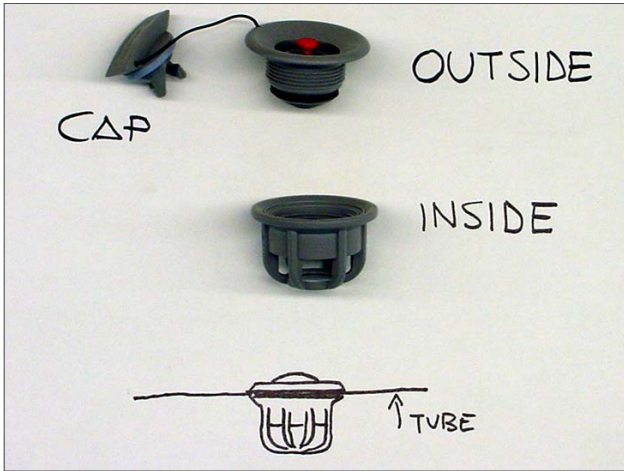

VALVE PARTS

1. SEPARATE THE OUTSIDE PART OF YOUR NEW VALVE BY TURNING THE INSIDE PART COUNTER CLOCKWISE. YOU WILL ONLY USE THE OUTSIDE PART. IF OPENED MOVE TO FIG.4.

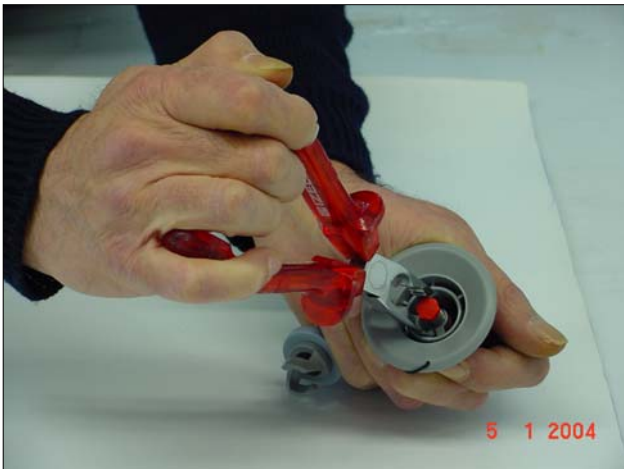

2. IF THE PARTS ARE STUCK TIGHT FIRST INSERT A PLIERS INTO THE RECESS AROUND THE RED PART TO PREVENT OUTSIDE PART FROM TURNING.



3. TURN THE INSIDE PART COUNTER CLOCKWISE WHILE KEEPING THE PLIERS IN THE RECESS AND REMOVE THE INSIDE PART.



4.1. DEFLATE TUBE COMPLETELY

4.2. GRAB THE INSIDE PART OF THE VALVE FIRMLY AND DO NOT LET GO UNTIL FINISHED.

CAUTION ! DO NOT DROP INSIDE PART INTO THE TUBE. RECOVERY AND VALVE REPLACEMENT MAY BE VERY DIFFICULT AND COSTLY.



5.1. FIRST INSERT YOUR PLIERS INTO THE RECESS AROUND THE RED PART TO PREVENT OUTSIDE PART FROM TURNING.

5.2. TURN THE PLIERS COUNTER CLOCKWISE WHILE FIRMLY HOLDING THE INSIDE PART.

5.3. REMOVE THE OUTSIDE PART.



6.1. WHILE STILL FIRMLY HOLDING THE INSIDE PART, FIT THE NEW OUTSIDE PART ONTO THE INSIDE PART AND TURN CLOCKWISE.



6.1. WHILE STILL FIRMLY HOLDING THE INSIDE PART, TIGHTEN THE OUTSIDE PART FIRMLY BY TURNING THE PLIERS.

YOUR VALVE IS READY TO USE.