


IMPORTANT


With materials supplied on the repair-kit is possible to made only small repairs. For heavy damages the repair is possible only through a NorthStar service points or by a Professional technician.

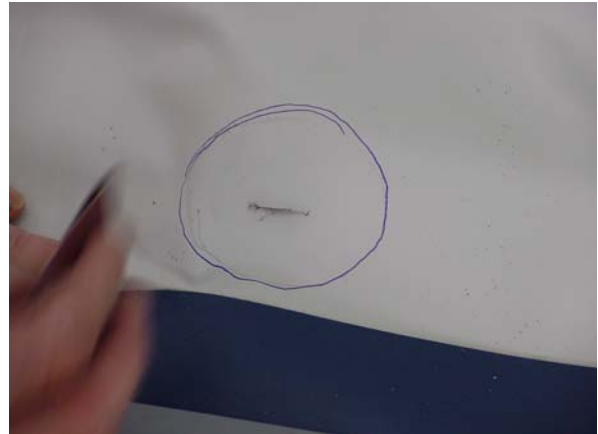


1- Define the area around the cut or hole with the margins showed on picture.



2- From the fabric of the repair-kit cut a shape corresponding to the area defined on point No 1.

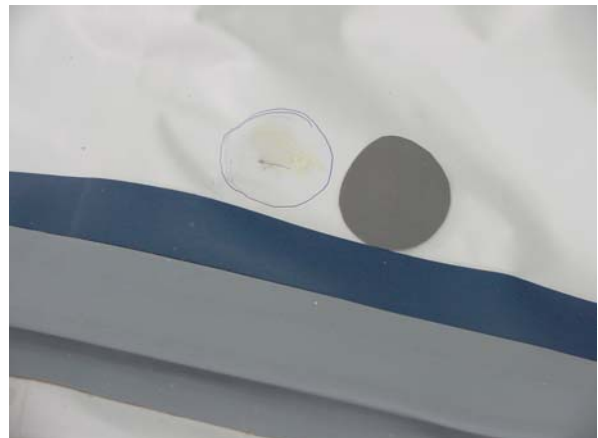

3- By the sandpaper of the repair kit careful scrape-off the defined area of point No 1 and the fabric shape of the point No 2.

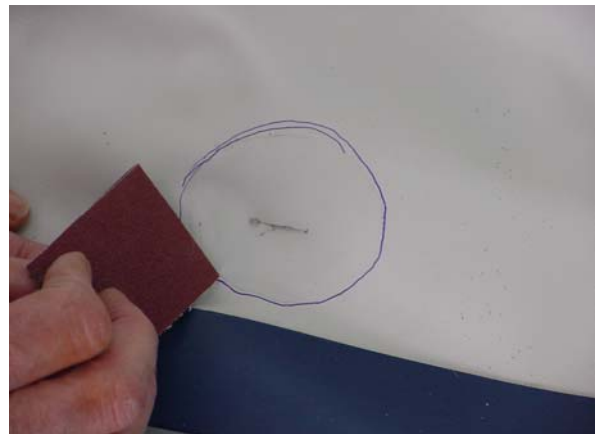

- 4- By the brush lay uniformly the glue on the two scraped areas. Wait until the glue is not more liquid but still sticky. Go to the point No 5.



- 5- Couple carefully the fabric part of point No 2 to the area of point No 1 and after press with care all the surface of the glued parts.



IMPORTANT

After the repair and for small cuts (2/3 cm.) or small holes (1/2 cm.) wait at least 1 hour before the inflation. For bigger cuts (6/8 cm.) or holes (1 or 2cm.) wait at least 3 hours. In case of absolute urgency wait at least half an hour, inflate around 60% of the normal working pressure and sail at low speed to a safe place. Check again the repair airtight before reset the normal working pressure.